

Check The Memory Capacity of Your PRO-SERIES Instrument



By following these steps, you will be able to determine whether your **ELITEpro™** or **DATApro™** Instrument has Standard or High Memory.

The easiest way to see how much memory your logger has is to send a Set-Up Table (or SUT) to your unit. On the first page of the SUT, there are two fields which show the “Calculated Days Until Memory Exhausted”. Make a note of the number in this field.

Send the table to your logger, then from the ELOG toolbar choose:
Logger > Display Present Readings > Show as Text.

When the box appears, there will be a “Memory Remaining” box in the bottom-left corner which will contain a number of days. This number will very closely match one of the values you saw on the SUT.

If the value in the “Memory Remaining” box matches the lower number of days from the SUT, it means you have 128k (Standard) memory, if it matches the higher, it means you have 512k (High).